

 
## Safety

- Do not cover the ground contact.
- Do not cover the luminaire, hang or fasten anything from it.
- Do not operate if any visible damage can be seen to the product.
- Do not operate if any water ingress has occurred.
- Do not operate if any smoke, steam or crackling noises can be heard from the luminaire.
- Do not operate if any signs of overheating are recognised.
- Avoid installation in any areas where there is a risk of strong mechanical loads.
- Do not place any material over the lens or LED diode/chip.
- Do not insert objects into the luminaire.
- Do not clean using any solvent based abrasive or aggressive product.
- Do not pull any cables connected to the product.
- Do not direct the luminaire into a persons eyes, as this unit may have an intense light output, which if incorrectly used may cause eye damage.
- Light engines/LEDs and other light sources may heat up, please take care when handling the products.
- The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Please refer to our troubleshooting guide for further information.
- The manufacturer will not be held liable for any death(s) or injuries caused by misuse or poor installation or any unreported faults of this product version or versions thereof.
- LEDs are sensitive to electrostatic discharge. Do not touch the surface of the LED module.
- Do not connect to a temporary electricity supply, this may damage the electronics.
- Light fittings with an integrated emergency option are with a separate installation and wiring leaflet. Please refer to this manual for further details. If the manual is unavailable please contact an All LED representative for assistance.
- It is strongly recommended that a Residual-Current Device (RCD) is used with this product to minimise the risk of electrocution.
- REPLACE DAMAGED PRODUCT IMMEDIATELY.
- Keep away from children.

## Returns & Faulty Items

- If any problem is encountered during or after installation, please call All LED technical department to get the problem resolved as soon as possible.
- Please do not just return the item to the outlet you purchased it from, as you are only entitled to a replacement or refund after the unit has undergone testing and the unit has been confirmed as having a manufacturing defect/fault. Your statutory rights are not affected.
- The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Please refer to our troubleshooting guide for further information.
- All installations must be carried out in accordance with this installation guide and user manual.
- All goods are supplied under the terms and conditions of All LED LTD, a copy of which may be obtained upon written request.

**Environmental Protection**  
Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



This product supplied with a limited guarantee, subject to terms and conditions. The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Your statutory rights are not affected.



**ALL LED LTD**  
42 Sedgwick Road,  
Luton, LU4 9DT

www.allledgroup.com  
sales@allledgroup.com  
Tel: +44 (0)208 841 9000



## INSTALLATION GUIDE ABG330/CCT/MS/EM



### ENSURE POWER SUPPLY IS OFF WHEN HANDLING ANY ELECTRICAL EQUIPMENT.

- This product may need to be installed by a qualified electrical installer.
- Please read this guide in its entirety to fully understand the products before attempting any install.
- All electrical work should be completed in accordance with the latest IET regulations, and/or any other relevant rules, regulations or laws of the country in which it is being installed.
- The item must be installed in isolation from any insulating material and is adequately ventilated to prevent premature failure.
- Ensure power supply is isolated prior to installation, maintenance or performing any other form of electrical work.
- In the event of incorrect or improper function with specific regard to any of ALL LED's products contact ALL LED for further advice.

### SAFETY WARNING

- ENSURE THE PROTECTIVE PLASTIC PLATE LOCATED ON TOP OF THE LED'S IS NEVER REMOVED OR TAMPERED WITH.
- IF THERE IS ANY VISIBLE DAMAGE TO THIS ITEM, PLEASE ENSURE THAT THE POWER IS SWITCHED OFF AND REMAINS OFF.
- DO NOT TOUCH THE LED CHIPS AT ANY POINT DURING, OR AFTER INSTALLATION OF THE LUMINAIRE AS THERE IS RISK OF ELECTRICAL SHOCK.

### Technical Specifications

Product Code	ABG330/CCT
Luminous Flux (LM)	3000K - 1313lm / 4000K - 1436lm / 6000K - 1346lm
Useful Luminous Flux (LM)	3000K - 1313lm / 4000K - 1436lm / 6000K - 1346lm
CCT (Kelvin)	3000K / 4000K / 6000K
Beam Angle (°)	120
SDCM	<6
CRI	>80
Peak Intensity (cd)	505
Operating Voltage (V)	39VDC
Max Output Power (W)	13W
Operating Current (A max)	335mA
Standby Power (W)	≤0.5
Power Factor (PF)	>0.9
Class	II
Body Material	PC
Cut Out	N/M
Frame Colour	White
Switching Cycles	30000
Ingress Protection	IP65
Ambient Operating Temperature (°C)	-20°C - +40°C
Input Frequency (Hz)	50Hz
Guarantee	3 Years
Dimmable	No
Cable Length	No
Life Time (L70 B50)	30000
Survival Factor	>0.9
Lumen Maintenance Factor	>0.7
Displacement Factor	>0.9

### Driver Technical Specification





Operating Voltage	240VAC
Max Output Power	13W
Output Current (Max)	335mA
Output Voltage (Max)	39V
PF	DF>0.9
Efficiency %	87
No Load Power (W)	≤0.5W
Dimmable	No
Class	II
Body Material	PC
Frame Colour	White
Switching Cycles	30000
Ingress Protection	IP65
Ambient Operating Temperature (°C)	-20°C - +40°C
Input Frequency (Hz)	50Hz
Guarantee	3 Years
Output Type	Isolated Driver
Life Time	30000

### Sensor Technical Specification

Operating Voltage	220 - 240 VAC 50/60Hz
Rated Load	400W (Capacitive Load) 800W (Resistive Load)
Stand-by Power	<0.5W
Sensitivity	10% / 50% / 75% / 100%
Hold-time	5s / 90s / 5min / 15min
Daylight Sensor	2lux / 10lux / 50lux, disable
Microwave Frequency	5.8 GHz +/- 75MHz
Transmitting Power	<0.2mW
Detection Range	Max (diameter x height): 10m x 6m
Detection Angle	30° - 150°
Working Temperature	-20°C - +60°C

### Emergency Technical Specification


Emergency Output	2W
Emergency Duration	3 Hours
Battery Type	Ni-Cd
Battery Voltage (DCV)	4.8VDC
Battery Current (mAh)	1500mAh

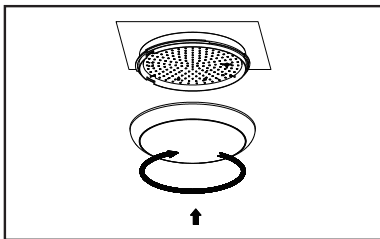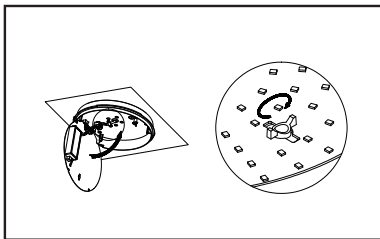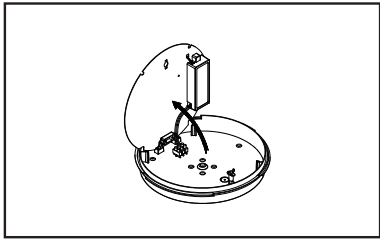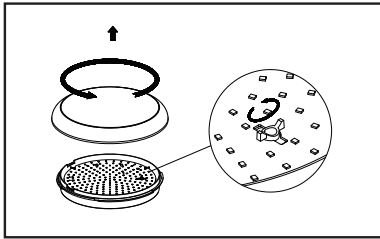

## Installation

1. We recommend checking the installation with the products for suitability prior to installation.
2. Prepare the surface to receive the luminaire.
3. Turn off power supply at source to avoid any risk of electric shock.
4. Remove the top cover from the luminaire by firmly holding the base and twisting the diffuser anti-clockwise.
5. Rotate the quick-release mechanism to flip down the gear tray.
6. Wire the product into the lighting circuit according to relevant regulations.
7. Close the gear tray by using the quick-release mechanism.
8. Twist lock the diffuser by rotating it back into its place.
9. Turn the power supply back to the on position and check the luminaire is functioning.

## Dimensions (mm)

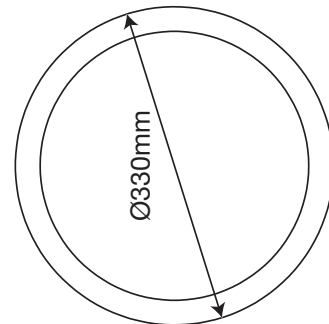

Diameter : Ø 330 mm  
Overall Depth : 79 mm

Please note: All Emergency models have 4 terminals:

- Permanent Live
- Switched Live
- Neutral
- Earth

Please connect the battery quick-connector together after installation.

To select the required colour temperature, please use the switch on the LED PCB that is indicated with the respective colour.

## Troubleshooting Guide

PROBLEM	CAUSE(S)	SOLUTION(S)
No Light Output From LEDs	No power to drive components	A qualified installer/electrician should check the primary voltage side of the product to check the input voltage.
	Loose connection on circuit	Ensure continuous and correct connection between terminals.
	Overvoltage may have caused damage to the sensitive components	These cases are rare and the item may need replacement and/or investigation as to the cause of failure.
LEDs Flashing	Incorrect voltage range being used	Please ensure there is a regulated AC voltage supply within the parameters of the luminaire. Failure to do so will void the warranty.
	LED driver may be connected to a mains dimmer switch	Please remove the dimmer switch and wire the unit to a switch, removing any mains dimmers or other dimmers on the primary side. Use of this product on a dimmer will void the warranty.
	Loose connection on circuit	Ensure continuous and correct connection between the terminals.

This product contains a light source of energy efficiency class: F

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



### ATTENTION

**IF ANY PROBLEMS PERSIST, PLEASE CALL THE ALL LED TECHNICAL DEPARTMENT FOR FURTHER ASSISTANCE.**