



INSTALLATION GUIDE AEM/PACK

N ENSURE POWER SUPPLY IS OFF WHEN HANDLING ANY ELECTRICAL EQUIPMENT.


- This product may need to be installed by a qualified electrical installer.
- Please read this guide in its entirety to fully understand the products before attempting any install.
- All electrical work should be completed in accordance with the latest IET regulations, and/or any other relevant rules, regulations or laws of the country in which it is being installed.
- The item must be installed in isolation from any insulating material and is adequately ventilated to prevent premature failure.
- Ensure power supply is isolated prior to installation, maintenance or performing any other form of electrical work.
- In the event of incorrect or improper function with specific regard to any of ALL LED's products and contact ALL LED for further advice.

Technical Specifications

| Product Code | AEM/PACK |
|------------------------------------|-------------|
| Operating Voltage | 220-240V AC |
| Operating Current (A Max) | 0.05A |
| Max Output Power | 2W |
| Output Current Range | 30-200MA |
| Output Voltage Range | 10-60V DC |
| PF | ≥0.5 |
| Class | II |
| Body Material | Polymer |
| Frame Colour | Black |
| Ambient Operating Temperature (°C) | 0°C~50°C |
| Input Frequency (Hz) | 50Hz / 60Hz |
| Guarantee | 5 Years |
| Charge Time | 24H |
| Battery Type | LifePO4 |
| Battery Voltage | 6.4V |
| Battery Current | 2 x 1800mAH |
| Battery Capacity | 11.52wH |
| Emergency Duration | 3H |
| Indicator Cutout | 20mm |


Wiring Diagram


1) For use with constant current light sources.

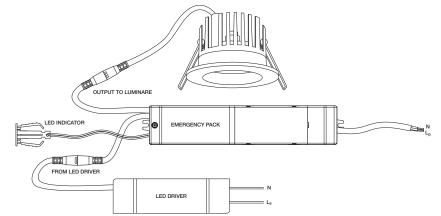

2) For use with constant voltage (LED Strip)

 Please wire both LED strip and LED driver to the luminare cable. Connectors will need to be cut away to bare wire.



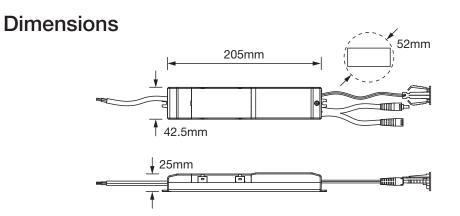

Troubleshooting Guide

| PROBLEM | CAUSE(S) | SOLUTION(S) |
|-------------------------------|---|---|
| No Light Output From LED's | No power to drive components | A qualified installer/electrician should check the Primary voltage side of the product to check the input voltage. |
| | Loose connection on primary side. | Ensure continuous and correct connection between terminals. |
| | Loose connection on secondary side. | Ensure continuous and correct con- nection between terminals. Ensure the polarity is correct; (Red = +, Black = -). |
| | No output from the driver. | Driver may be faulty and require re- placement. Please order a replacement via your local outlet. Product codes are listed on the specification table on the first page. |
| | Overvoltage may have caused damage to the sensitive LED components. | These cases are rare and the item may need replacement and/or investigation as to the cause of failure. |
| LED's Flashing | Unstable or incorrect input voltage. | Please only use a stable voltage supply as stipulated earlier for this product. Failure to do so will void the warranty. |
| | LED driver may be connected to a dimmer switch | Please remove the dimmer switch. Use of this product on a dimmer will void the warranty. This product is supplied non-dimmable as standard. |
| | Loose connection on primary side. | Ensure continuous and correct connec- tion between the terminals. |
| | Loose connection on secondary side. | Ensure continuous and correct con- nection between terminals. Ensure the polarity is correct; (Red = +, Black = -). |
| | Wattage overload | Too much power is trying to be drawn from the item. Flashing indicates the overload protection is actively working to prevent any damage to the item. Reduce the load on the DC side of the item. |



IF ANY PROBLEMS PERSIST, PLEASE CALL THE ALL LED TECHNICAL DEPARTMENT FOR FURTHER ASSISTANCE.

Safety

- Do not cover the ground contact.
- Do not cover the luminaire, hang or fasten anything from it.
- Do not operate if any visible damage can be seen to the product.
- Do not operate if any water ingress has occurred.
- Do not operate if any smoke, steam or crackling noises can be heard from the luminaire.
- Do not operate if any signs of overheating are recognised.
- Avoid installation in any areas where there is a risk of strong mechanical loads.
- Do not place any material over the lens or LED diode/chip.
- Do not insert objects into the luminaire.
- Do not clean using any solvent based abrasive or aggressive product.
- Do not pull any cables connected to the product.
- Do not direct the luminaire into a persons eyes, as this unit may have an intense light output, which if incorrectly used may cause eye damage.
- Light engines/LED'S and other light sources may heat up, please take care when handling the products.
- The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Please refer to our trouble shooting guide for further information.
- The manufacturer will not be held liable for any death(s) or injuries caused by misuse or poor installation or any unreported faults of this product version or versions thereof.
- LED's are sensitive to electrostatic discharge. Do not touch the surface of the LED module.
- Do not connect to a temporary electricity supply, this may damage the electronics.
- Light fittings with an integrated emergency option are with a separate installation and wiring leaflet. Please refer to this manual for further details. If the manual is unavailable please contact an ALL LED representative for assistance.
- REPLACE DAMAGED PRODUCT IMMEDIATELY.
- Keep away from children.

Returns & Faulty Items

- If any problem is encountered during or after installation, please call ALL LED technical department to get the problem resolved ASAP.
- Please do not just return the item to the outlet you purchased it from, as you are only entitled to a replacement or refund after the unit has undergone testing and the unit has been confirmed as having a manufacturing defect/fault. Your statutory rights are not affected.
- The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device. Please refer to our trouble shooting guide for further information.
- All installations must be carried out in accordance with this installation guide and user manual.
- All goods are supplied under the terms and conditions of ALL LED LTD, a copy of which may be obtained upon written request.



ALL LED LTD 42 Sedgwick Road, Luton, LU4 9DT

www.allledgroup.com

sales@allledgroup.com

Tel: +44 (0)208 841 9000

Environmental Protection Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice



The manufacturer will not be deemed liable or held responsible for any damages caused by faults or manufacturing defects that may be present in any of its products or the misuse or incorrect installation of this device Your statutory rights are not affected.

